





 





# Quick Reference Guide – MGT Docking Station II

## Power On & Off


- To turn on, press and hold the Calibration or Bump Test button for 2 seconds
- Automatic power save mode after 5 minutes of inactivity
- To turn off, press and hold the Calibration and Bump Test button for 2 seconds

## LED`s

	Description
Bay LED	 Stand by
	 Injecting fresh air
	 Test
	 Purging remaining gas
	 Save a log data
	 Test pass
	 Test Fail
Power LED	 Green: Power On
	 Red: Low Battery
	 Orange: USB not attached or full storage


## Set up Calibration Gas Cylinder

- Remove thumbscrews and lift the handle
- Install the cylinder to the gas regulator
- Fasten the cylinder straps and close the cylinder compartment
- Check the pressure gauge on the front panel
- Re-install thumbscrews

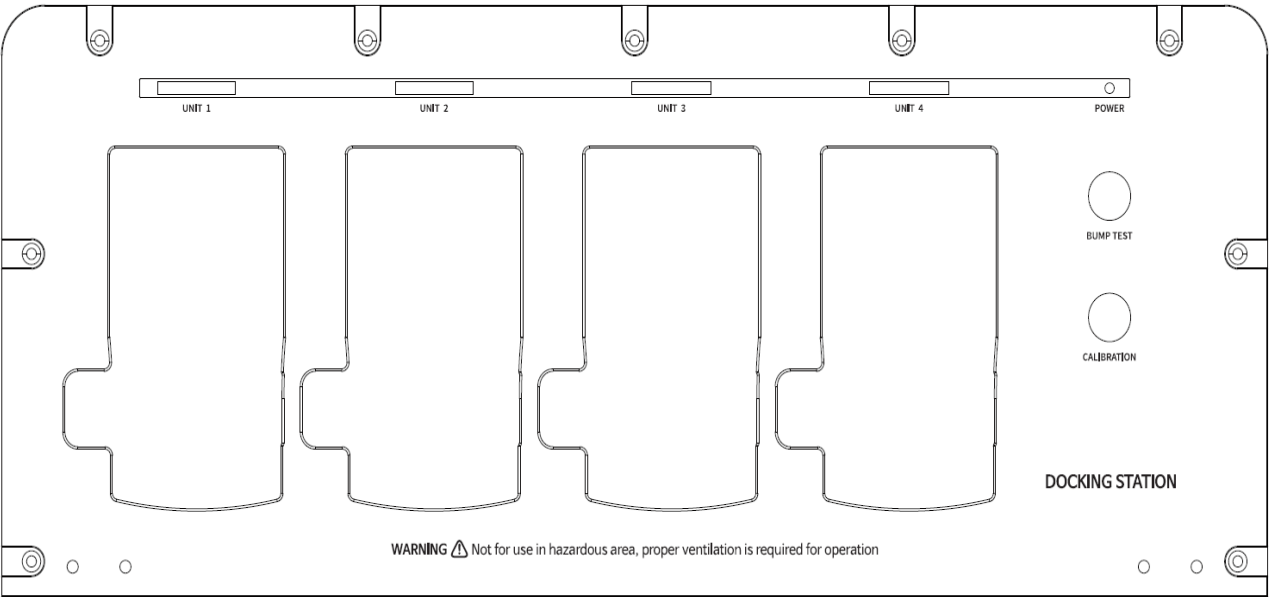

## Important Notes

- USB drive must be installed to store the test results
- For bump testing, ensure the cylinder gas concentration is above the “Low Alarm” setting in the MGT
- For calibration, ensure the MGT “Cal Concentration” setting is the same as the cylinder gas concentration
- Any monitors that fail a bump test must be calibrated before use
- Do not use a monitor that fails a calibration
- When connecting SENKO IR Link, make sure “Write” button has clicked to save customized settings.

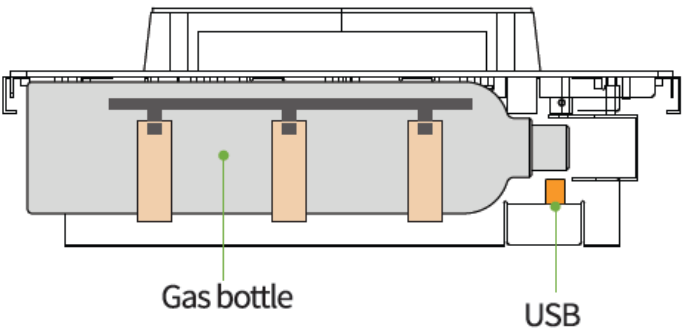

**SENKO**

CONTACT | [www.senko.co.kr](http://www.senko.co.kr) | [sales@senko.co.kr](mailto:sales@senko.co.kr) | 82-31-492-0445

## Bump Test

- Insert the monitor(s) into the bay facing down
- Press the bump test button for 2 seconds to execute Bump Test
- Up to 1,000 bump tests on a single charge

## Calibration

- Insert the monitor(s) into the bay facing down
- Press the calibration button for 2 seconds to execute Calibration test

## Test Results

- All (six) blue Bay LEDs illumination indicates if the MGT has passed the test
- The third blue Bay LED illumination indicates if the MGT has failed the test

## Trouble Shooting

- Bay Light does not turn on /test not performed
  - Clean Monitor IR window
  - IR interference (bright lights/sunlight)
  - Monitor in gas alarm state
- All tests fail
  - Gas cylinder empty
  - Gas Expired
  - Wrong gas concentration(s)
- Test results are not stored
  - USB not attached or full storage
- If you’re unable to resolve technical issues, please contact the product’s authorized reseller or SENKO service center.